




## Data sheet

# **KNX IP BAOS 777**

Interface and ObjectServer between LAN and KNX Bus

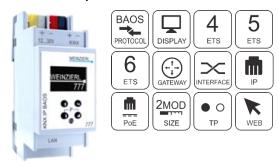

(Art. # 5193)

# **Application area**

The KNX IP BAOS 777 integrates a web server for the KNX installation. This allows the visualization in a web browser on a PC or mobile device.

The email function allows the notification e.g. in case of an alarm. The integration of a Date & Time Server (NTP) allows to obtain date and time automatically via the Internet and to synchronize the KNX installation. Extensive time functions offer a powerful KNX time switch with week function. The configuration is done with the ETS software.



Typical application

Additionally, the device offers the function of a KNX IP interface (KNXnet/IP). Developers can access all functions via an API with BAOS RESTful Web Services.

## **Technical Specification**



Electrical safety

Protection (acc. EN 60529): IP20

# CE marking according to

- EMC directive 2014 / 30 / EU
- RoHS directive 2011 / 65 / EU
- EN 63044-3: 2018, EN 50491-5-1: 2010 EN 50491-5-2: 2010, EN 50491-5-3: 2010
- EN 61000-6-2: 2019 EN 61000-6-3: 2007 + A1: 2011
- EN 63000: 2018

## **Environmental requirements**

- Ambient temp. operating: 5 ... + 45 °C
- Ambient temp. non-op.: 25 ... + 70 °C
- Rel. humidity (non-condensing): 5 ... 93 %

#### Mechanical data

- Housing: plastic
- DIN rail mounted device, width: 2 units (36 mm)
- Weight: approx. 90 g

## Controls and indicators

- OLED display with 4 buttons
- Programming LED (red)

### Ethernet

- 100 Mbit/s
- Supported internet protocols ARP, ICMP, IGMP, UDP/IP, TCP/IP, DHCP, SMTP, NTP
- Up to 8 KNXnet/IP Tunneling connections simultaneously
- Up to 10 BAOS connections simultaneously.

#### KNX

- Medium TP
- Interface protocol: cEMI
- Max. APDU length: 55
- Object Server: BAOS V2 BAOS RESTful Web Services

# Power supply

- External supply 12-30 Valternative: Power over Ethernet PoE
- Power consumption: < 1,5 W

#### Connectors

Bus connector for KNX (RD / BK)

- Connector for external power supply (YE / WH)
- LAN RJ-45 socket

### Installation Instructions

 The device may be used for permanent interior installations in dry locations, within distribution boards or small casings with DIN rail.





# WARNING

- The device must be mounted and commissioned by an authorized electrician.
- The prevailing safety rules must be heeded.
- The device must not be opened.
- For planning and construction of electric installations, the relevant guidelines, regulations and standards of the respective country are to be considered.



#### ETS6 Database

www.weinzierl.de/en/products/777/ets6 Manual

www.weinzierl.de/en/products/777/manual

### **CE Declaration**

www.weinzierl.de/en/products/777/ ce-declaration

WEINZIERL ENGINEERING GmbH

84508 Burgkirchen an der Alz **GERMANY** 

> Tel.: +49 8677 / 916 36 - 0 E-Mail: info@weinzierl.de Web: www.weinzierl.de

2022-05-13