

KNX L Brightness Sensor

Technical specifications and installation instructions

Item number 70119



1. Description

The **KNX L brightness sensor** measures the intensity of illumination and transfers the value to the KNX system. Six switching outputs with adjustable threshold values as well as additional AND and OR logic gates are available. The sensor system, the evaluation electronics and the electronics of the bus connection are mounted in a compact housing.

Functions:

- **Brightness measurement:** The current light intensity is measured by a sensor
- **3 threshold values for twilight** (up to 1000 lux), 3 for **daylight** (1-99 klux), can be adjusted per parameter or via communication objects
- **8 AND and 8 OR logic gates** with each 4 inputs. Every switching incident as well as 8 logic inputs (in the form of communication objects) may be used as inputs for the logic gates. The output of each gate may optionally be configured as 1 bit or 2 x 8 bits

Configuration is made using the KNX software ETS. The **product file** can be downloaded from the Elsner Elektronik website on www.elsner-elektronik.de in the "Service" menu.

1.1. Deliverables

- Sensor with combined wall/pole mounting
- 2x stainless steel installation band for pole installation

1.2. Technical specifications

Housing	Plastic material
Colour	White / translucent
Mounting	On-wall
Degree of protection	IP 44
Dimensions	approx. 96 x 77 x 118 (W x H x D, mm)
Weight	approx. 150 g
Ambient temperature	Operation -30...+50°C, storage -30...+70°C
Voltage	KNX bus voltage
Current	max. 10 mA
Data output	KNX +/- bus terminal plug
Group addresses	max. 254
Allocations	max. 255
Communication objects	117
Measurement range brightness	0 ... 150.000 lux

The product conforms with the provisions of EU directives.

2. Installation and commissioning



Installation, testing, operational start-up and troubleshooting should only be performed by an authorised electrician.



CAUTION! Live voltage!

There are unprotected live components inside the device.

- Inspect the device for damage before installation. Only put undamaged devices into operation.
- Comply with the locally applicable directives, regulations and provisions for electrical installation.
- Immediately take the device or system out of service and secure it against unintentional switch-on if risk-free operation is no longer guaranteed.

Use the device exclusively for building automation and observe the operating instructions. Improper use, modifications to the device or failure to observe the operating instructions will invalidate any warranty or guarantee claims.

Operate the device only as a fixed-site installation, i.e. only in assembled condition and after conclusion of all installation and operational start-up tasks, and only in the surroundings designated for it.

Elsner Elektronik is not liable for any changes in norms and standards which may occur after publication of these operating instructions.

2.1. Location

Select an assembly location at the building where sun may be collected by the sensors unobstructedly. The sensor may not be shaded by the building or for example by trees.

At least 60 cm of clearance must be left all round the device. Concurrently, the prevents spray (raindrops hitting the device) or snow (snow penetration) from impairing the measurement. It also does not allow birds to bite it. Please ensure that the extended awning does not cast shade on the unit, and that this is not protected from the wind.

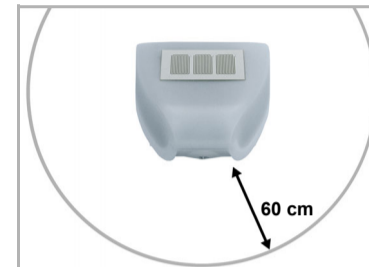


Fig. 1

There must be at least 60 cm of space below, to the sides and in front of the sensor left from other elements (structures, construction parts, etc.).

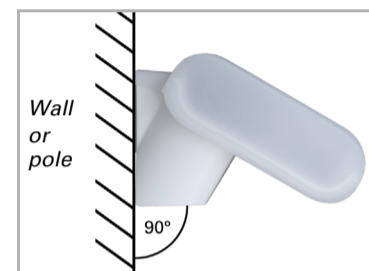


Fig. 2

The sensor must be mounted onto a vertical wall (or pole).



Fig. 3

The sensor must be mounted horizontally in the lateral direction.

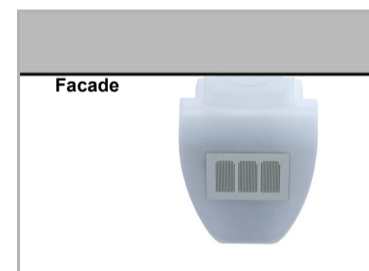


Fig. 2

The sensor must be aligned in the direction of the façade on which shade is to be provided.

2.2. Mounting the sensor

2.2.1. Attaching the mount

The sensor comes with a combination wall/pole mount. The mount comes adhered by adhesive strips to the rear side of the housing. Fasten the mount vertically onto the wall or pole.

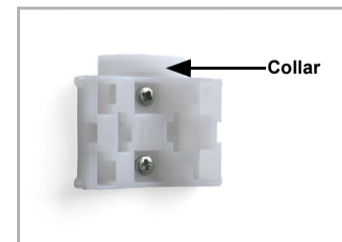


Fig. 3

When wall mounting: flat side on wall, crescent-shaped collar upward.

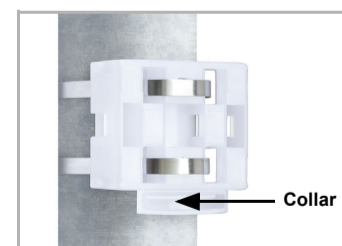


Fig. 4

When pole mounting: curved side on pole, collar downward.



Fig. 5

Different mounting arms are available from Elsner Elektronik as additional, optional accessories for flexible installation of the weather station on a wall, pole or beam (pictures of sensors exemplary). Example of the use of a mounting arm: Due to flexible ball joints, the sensor can



Fig. 6
Example use of the hinge arm mounting: With the hinge arm mounting, the weather station projects from beneath the roof overhang. Sun, wind and precipitation can act upon the sensors without hindrance.


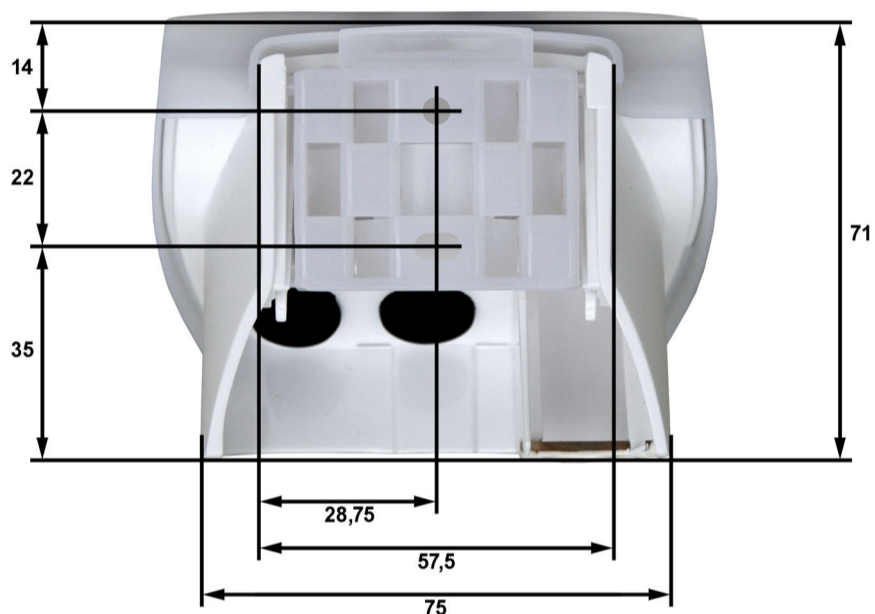


Fig. 7
Example use of the hinge arm mounting: Fitting to a pole with worm drive hose clips

2.2.2. View of rear side and drill hole plan

Fig. 8 a+b
Drill hole plan

Dimensions of rear side of housing with bracket. Subject to change for technical enhancement.

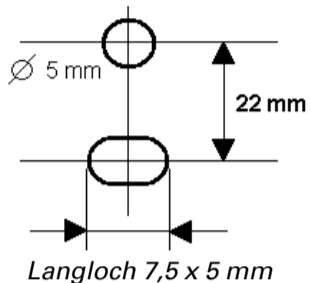

2.2.3. Preparing the sensor



The sensor cover snaps in on the left and right along the bottom edge (see Fig.). Remove the cover.

Push the bus connection cable through the rubber seal on the bottom of the sensor and connect bus +/- to the provided clamps.

2.2.4. PCB layout

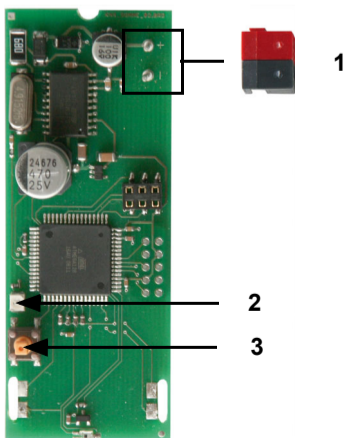


Fig. 10
1 Slot for KNX clamp +/-
2 Programming LED
3 Programming pushbutton for the teach-in of the device

2.2.5. Mounting the sensor

Close the housing by putting the cover back over the bottom part. The cover must snap in on the left and right with a definite "click".

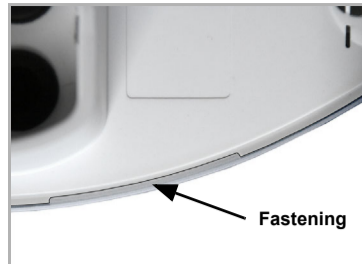


Fig. 11
Make sure the cover and bottom part are properly snapped together! This picture is looking at the closed sensor from underneath.



Fig. 12
Push the housing from above into the fastened mount. The bumps on the mount must snap into the rails in the housing.

To remove it, the sensor can be simply pulled upwards out of the mount, against the resistance of the fastening.

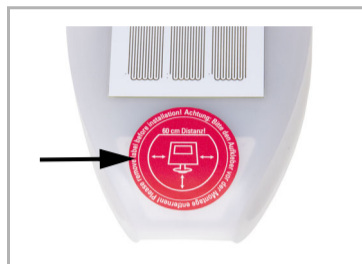


Fig. 13
After installation, remove the "distance" sticker on the top of the cover.

2.3. Notes on mounting and commissioning

Do not open the device if water (rain) might ingress: even some drops might damage the electronic system.

After the bus voltage has been applied, the device will enter an initialisation phase lasting a few seconds. During this phase no information can be received or sent via the bus.

3. Addressing of the device at the bus

The device is supplied with the bus address 15.15.255. You can program another address into the ETS by overwriting the 15.15.255 address or by teaching via the programming key on the circuit board inside the housing.

4. Maintenance

- WARNING!**
Risk of injury caused by components moved automatically!
The automatic control can start system components and place people in danger.
- Always isolate the device from the mains for servicing and cleaning.

The device must regularly be checked for dirt twice a year and cleaned if necessary. In case of severe dirt, the sensor may not work properly anymore.

- ATTENTION**
The device can be damaged if water penetrates the housing.
- Do not clean with high pressure cleaners or steam jets.

5. Disposal

After use, the device must be disposed of in accordance with the legal regulations. Do not dispose of it with the household waste!