

# SP-FAILO



## IN

### Sommario

Sense failover is an add-on license to Sense Pro base license.

This license is installed in the Failover server: the spare server waiting for a server Failure, in order to replace it in a time between 30 to 90 seconds.

A failover server can watch not only one working server but many at the same time and replace the first to crash.

The failover license has to be added to a Sense Pro Server License

# SP-FAILO



---

## Specifiche Tecniche

Licenza

Failover add-on

---