

DT1000P

Indoor DT detector with digital PIR sensor and petimmunity function for intrusion detection systems



Recipients of the instructions: U User | I Installer

1. DESCRIPTION

DT1000P is a double technology (infrared and microwave) detector for indoor use, featuring a compact housing and low consumption. It implements the **pet immunity** function, that allows reducing alarm triggering in locations where animals with a weight up to 40 kg are present.


In non-pet immune mode, the detection operation can be programmed to AND or OR mode: two LEDs (visible through the detector lens) notify the intervention of either technology.

Infrared (IR) section: high sensitivity digital PIR sensor with temperature compensation.

Microwave (MW) section: low consumption DRO planar antenna with pulsed operation, protected by electronic filter for neon lamps.

The detector's functions - including pet immune mode enabling - can be entirely configured by using on-board jumpers.

2. ELECTRONIC BOARD

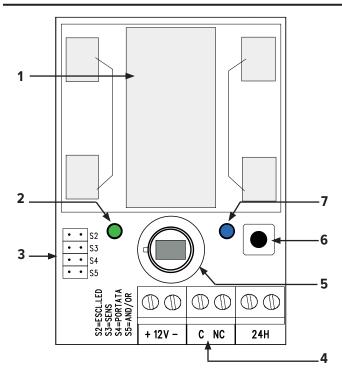

- 1. Planar antenna (MW section)
- 2. Green IR LED
- 3. Jumpers for function setting
- 4. Terminal board
- 5. PIR sensor (IR section)
- 6. Tamper for protection against opening
- 7. Blue MW LED

| Model | DT1000P | | | |
|--|--|--|--|--|
| Туре | IR + MW | | | |
| MW SECTION | | | | |
| Maximum range | 12 m | | | |
| Integration pulses | 4 - 8 | | | |
| Integration time | 5 s | | | |
| TX frequency | 10.525 GHz (9.9 GHz for model | | | |
| | operating at different frequency) | | | |
| Coverage area | 72° horizontally; 36° vertically | | | |
| Emitted power | 13 dBm E.I.R.P. | | | |
| Spurious emissions | < -30 dBm | | | |
| IR SECTION | | | | |
| Maximum range | 12 m | | | |
| Integration pulses | 2 - 3 | | | |
| Integration time | 5 s | | | |
| Number of sensitive | 18 | | | |
| zones | - | | | |
| Number of plans | 4 | | | |
| Volumetric opening 95° | | | | |
| | HANICAL FEATURES | | | |
| Protection grade | IP3X | | | |
| Operating temperature | -10 / +55 °C | | | |
| Current draw | Stabilization at power up: 18 mA | | | |
| | Idle: 11 mA In alarm condition: 15 mA | | | |
| Power cupply | | | | |
| Power supply | DC 12 V (7.5 - 15 V) | | | |
| Allowed ripple Alarm and 24H output | 200 mV (peak-to-peak) | | | |
| resistance | 10 Ω | | | |
| Alarm relay capacity | 500 mA | | | |
| Timings | Alarm: 3 s | | | |
| | Stand-by at power up: 45 s | | | |
| | Pre-alarm waiting time in AND | | | |
| | operating mode: 10 s | | | |
| Installation height | 2.10 m (standard) | | | |
| Dimensions and weight | 1 | | | |
| Compliance to EN50131 | Grade 1, Environmental Class 2 | | | |
| | Environmental Class Z | | | |

4. PREPARATORY CONSIDERATIONS BEFORE MOUNTING

Carefully read the following indications before moving forward with the device installation:


- DT1000P has been designed for protection of indoor locations. It is equipped with a specific lens: the lower beams generated by this lens - i.e. the ones covering the area pets usually pass through - feature a lower detection sensitivity.
- Choose the installation position taking into account the IR and MW coverage shown in the following diagrams. Ensure the detector field of view is completely free and no portion of it is covered by any obstacle.
- To enable the *pet immune* mode, open jumper S4 and set the device to AND mode (jumper S5 closed). See "6.1 "Pet immune" mode" on page 4 for further indications.
- For optimal usage, install the detector at a height of 2.1 m.
- Adjust the detector MW range so that it does not cross any window or glass wall.
- Do not install the detector near oscillating metal shutters, or near vibrating metal walls (e.g. refrigeration units).
- When installing two detectors next to each other, the second one has to be a model operating at a different frequency:

DT1000P RCRDTMP048#00 (standard) DT1000P RCRDTMP050#00 (9.9 GHz model)

• Do not touch the PIR sensor with fingers.


Coverage diagrams in non-pet immune mode:

- Jumper S4 closed
- Range: 12 m (maximum)

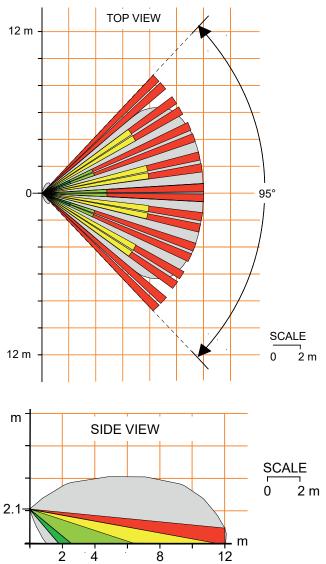


Coverage diagrams at minimum range:

Jumper S4 open

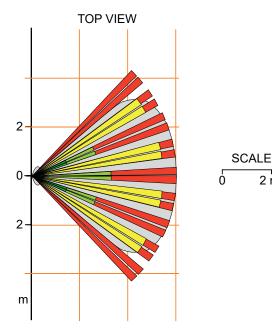


2 m

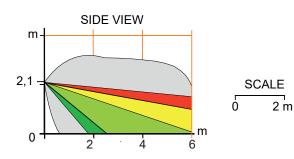


5. MOUNTING OPERATIONS

1. **Housing opening**

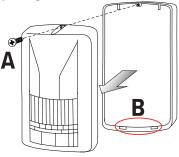


- unscrew the cover fastening screw (A) -
- pull off the front cover by detaching it from the tabs (B) -

Board releasing 2.

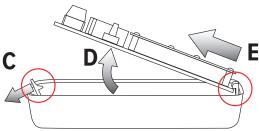


- push the stopping lever outwards (C)
- while keeping it pushed, lift the board upwards (D) and pull it out from the upper hooks (E)

 Bottom fastening 3.




drill a hole in position H or I (the plastic material is pre-drilled) _ for cable feeding

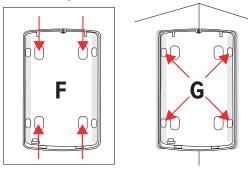


- use a screwdriver to pierce the 4 pre-drilled areas: choose _ the suitable ones for wall (F) or corner mount (G)
- use the housing bottom as a template to mark the fastening points on the surface
- drill the wall and insert the supplied plugs in the holes -
- fasten the bottom to the wall by using the supplied screws -

 4. Electrical wiring



- strip the sheath from the cable end to be connected to the terminal board
- feed the cable through the channel and pull it from the previously arranged hole
- connect the wires to the terminals.

In the picture below you can see an example of double balanced line (the resistors, supplied as control unit's standard equipment, must be externally wired; the typical values are $R1 = R2 = 1.5 \text{ k}\Omega$ for EL.MO. control units).

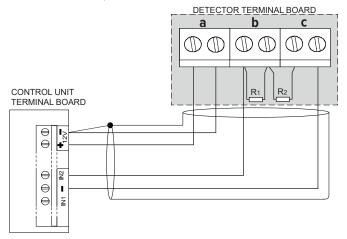

- a. Detector power supply (+12 V)
- b. Detector alarm relay output (C-NC)
 Capacity: 500 mA
 Series resistance: 10 Ω
- c. Tamper output (NC)

 
5. Board reinsertion

Perform the board releasing operations in reverse order:

- drive the board below the upper hooks
- turn it downwards
- push it under the stopping lever.

6. Jumper setting-out

- set the jumpers for function selection (see chapter "6. CONFIGURATION")
- 7. Housing closing



- lean the cover on the bottom, <u>ensuring the Tamper</u> protection spring perfectly fits in place
- hook the cover to the bottom tabs
- fasten the cover by using its screw

6. CONFIGURATION

DT1000P's functions can be entirely configured by using the jumpers shown in chapter "2. ELECTRONIC BOARD".

To set them, remove the cover as described in the previous chapter.

| Jumper | Function | Closed (default) | Open |
|--------|----------------------------|----------------------|----------------------|
| S2 | LED exclusion | LED enabled | LED disabled |
| S3 | Sensitivity (pulse no.) | MAX (2 IR + 4 MW) | MIN (3 IR + 8 MW) |
| S4 | Mode selection | Non-pet immune* | Pet immune |
| S5 | AND/OR | AND | OR |

* the range is maximum in this mode (12 m)


6.1 "Pet immune" mode

Open jumper S4 and close jumper S5 (AND mode enabling) to activate the *pet immune* mode.

The detector becomes insensitive to animal motion within the protected area.


Please keep in mind the following installation rules:

- in pet immune operation, the detector becomes insensitive to the motion of animals whose weight does not exceed 40 kg.
- the pet immune area does not include the upper beam indicated in the diagrams: therefore, install the detector ensuring that no animals cross that beam.

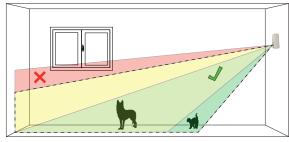

---- Pet immune area

we recommend that you install the detector in rooms whose depth does not exceed 6 m. In longer rooms, the upper beam would not be far enough from the floor to guarantee the immunity.

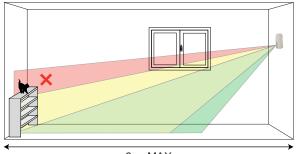

6 m MAX

DT1000P detects any motion within its coverage area.

The alarm notification occurs according to the set operating mode:

• AND mode (S5 jumper closed)

The alarm relay activates only when <u>both</u> IR and MW technologies signal the alarm.

Either technology detects motion and enters the (IR or MW) prealarm condition, lasting 10 seconds.

If the other technology does not confirm the motion detection within this time, the pre-alarmed section resets.

• OR mode (S5 jumper open)

The alarm relay activates each time <u>either</u> technology detects motion within the area. <u>This mode is not compatible with the pet</u> <u>immune mode</u>.

Environmental monitoring


The DT1000P IR section performs constant accurate control of the environment and of its thermal disturbances.

Thermal compensation is used to adjust the IR sensitivity according to the environment temperature, in order to achieve optimal response to the human motion and thus to reduce false alarms.


7.1 LED indications during operation

| Green LED | Blue LED | Indication |
|-------------|-------------|--------------|
| ON for 45 s | ON for 45 s | Power up |
| ON for 3 s | ON for 3 s | Alarm |
| Flashing | - | IR pulse |
| Steadily ON | - | IR pre-alarm |
| - | Flashing | MW pulse |
| - | Steadily ON | MW pre-alarm |

 8. DEVICE TEST



Move within the sensor coverage area, walking in half-round paths around the detector (as shown in the picture below) from opposite directions, in order to define the coverage area boundaries on both sides.

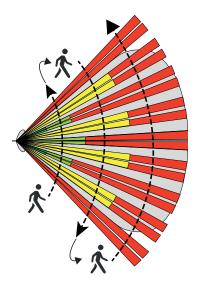

The detector shall react as follows:

- green LED pulse: detection from IR section;
- blue LED pulse: detection from MW section;
- both LEDs switch on together: alarm.



EU DECLARATION OF CONFORMITY

Hereby, EL.MO. S.p.A. declares that the radio equipment DT1000P is in compliance with Directive 2014/53/ EU. The full text of the EU Declaration of Conformity is available at the following internet address: elmospa.com - registration is quick and easy.



GENERAL WARNINGS

This device has been designed, built and tested with the utmost care and attention, adopting test and inspection procedures in accordance with current legislation. Full compliance of the working specifications is only achieved in the event the device is used solely for its intended purpose, namely:

Indoor DT detector with digital PIR sensor with pet immunity function for intrusion detection systems.

The device is not intended for any use other than the above and hence its correct functioning in such cases cannot be assured.

Consequently, any use of the manual in your possession for any purpose other than those for which it was compiled - namely for the purpose of explaining the product's technical features and operating procedures is strictly prohibited.

Production processes are closely monitored in order to prevent faults and malfunctions. However, the componentry adopted is subject to an extremely modest percentage of faults, which is nonetheless the case with any electronic or mechanical product. Given the intended use of this item (protection of property and people), we invite you to adapt the level of protection offered by the system to suit the actual situation of risk (allowing for the possibility of impaired system operation due to faults or other problems), while reminding you that there are specific standards for the design and production of systems intended for this kind of application.

We hereby advise you (the system's operator) to see that the system receives regular routine maintenance, at least in accordance with the provisions of current legislation, and also check on as regular a basis as the risk involved requires that the system in question is operating properly, with particular reference to the control unit, sensors, sounders, dialler(s) and any other device connected. You must let the installer know how well the system seems to be operating, based on the results of periodic checks, without delay.

Work involved in the design, installation and maintenance of systems incorporating this product should be performed only by personnel with suitable skills and knowledge required to work safely so as to prevent any accidents. It is vital that systems be installed in accordance with current legislation. The internal parts of certain equipment are connected to the mains and therefore there is a risk of electrocution when maintenance work is performed inside without first disconnecting the primary and emergency power supplies. Certain products include batteries, rechargeable or otherwise, as an emergency backup power supply. If connected incorrectly, they may cause damage to the product or property, and may endanger the operator (explosion and fire).

WARNINGS FOR THE INSTALLER

Comply strictly with current standards governing the installation of electrical systems and security systems, and with the manufacturer's directions given in the manuals supplied with the products.

Provide the user with full information on using the system installed and on its limitations, pointing out that there are different levels of security performance that will need to suit the user's requirements within the constraints of the specific applicable standards. See that the user looks through the warnings given herein.

Work involved in the design, installation and maintenance of systems incorporating this product should be performed only by personnel with suitable skills and knowledge required to work safely so as to prevent any accidents. It is vital that systems be installed in accordance with current legislation. The internal parts of certain equipment are connected to the mains and therefore there is a risk of electrocution when maintenance work is performed inside without first disconnecting the primary and emergency power supplies. Certain products include batteries, rechargeable or otherwise, as an emergency backup power supply. If connected incorrectly, they may cause damage to the product or property, and may endanger the operator (explosion and fire).

WARNINGS FOR THE USER

 (\mathbb{U})

Check the system's operation thoroughly at regular intervals, making sure the equipment can be armed and disarmed properly.

Make sure the system receives proper routine maintenance, employing the services of specialist personnel who meet the requirements prescribed by current regulations.

Ask your installer to check that the system suits changing operating conditions (e.g. changes in the extent of the areas to be protected, change in access methods, etc...).

 
BASIC SAFETY RULES

It is forbidden for the appliance to be used by children or unassisted disabled persons.

It is forbidden to touch the appliance with wet hands or body when barefoot, or to splash or throw water directly on it.

It is forbidden to pull, detach or twist any protruding electrical wires, even if the appliance is disconnected from power supply mains.

DISPOSAL INSTRUCTIONS



In accordance with Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), please be advised that the EEE was placed on the market after 13th August 2005 and must be disposed of separately from normal household waste.